APEX KART WORKS



REAR TRACK GAUGE LASER

apexkartworks.com
apexkartworks@gmail.com

QUICK START


LASER MEASURE
3 STEPS

1 SWITCH ON

Short press [▲]. The laser dot comes on. It shuts off after 30 s idle – press [▲] to bring it back.

2 SET THE REFERENCE TO FRONT

Long press [▮+] until the display icon changes. Front is the laser end. Check it every time you switch on.

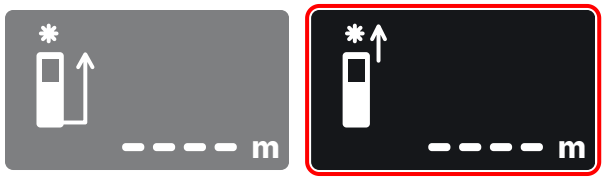

✕ BACK (DEFAULT) ✓ FRONT – USE THIS

3 MEASURE

With the laser dot on, press [▲]. The reading shows on the bottom line in metres: **1.395 m = 1395 mm**.

⚠ Laser: never point at eyes.

MEASURE. IMPROVE. GO FASTER.

APEX KART WORKS

REAR TRACK GAUGE LASER

apexkartworks.com
apexkartworks@gmail.com

QUICK START

LASER MEASURE
3 STEPS

1 SWITCH ON

Short press [▲]. The laser dot comes on. It shuts off after 30 s idle – press [▲] to bring it back.

2 SET THE REFERENCE TO FRONT

Long press [▮+] until the display icon changes. Front is the laser end. Check it every time you switch on.

✕ BACK (DEFAULT) ✓ FRONT – USE THIS

3 MEASURE

With the laser dot on, press [▲]. The reading shows on the bottom line in metres: **1.395 m = 1395 mm**.

⚠ Laser: never point at eyes.

MEASURE. IMPROVE. GO FASTER.

APEX KART WORKS



REAR TRACK GAUGE LASER

apexkartworks.com
apexkartworks@gmail.com

QUICK START


LASER MEASURE
3 STEPS

1 SWITCH ON

Short press [▲]. The laser dot comes on. It shuts off after 30 s idle – press [▲] to bring it back.

2 SET THE REFERENCE TO FRONT

Long press [▮+] until the display icon changes. Front is the laser end. Check it every time you switch on.

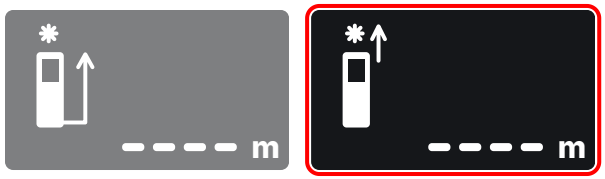

✕ BACK (DEFAULT) ✓ FRONT – USE THIS

3 MEASURE

With the laser dot on, press [▲]. The reading shows on the bottom line in metres: **1.395 m = 1395 mm**.

⚠ Laser: never point at eyes.

MEASURE. IMPROVE. GO FASTER.

APEX KART WORKS

REAR TRACK GAUGE LASER

apexkartworks.com
apexkartworks@gmail.com

QUICK START

LASER MEASURE
3 STEPS

1 SWITCH ON

Short press [▲]. The laser dot comes on. It shuts off after 30 s idle – press [▲] to bring it back.

2 SET THE REFERENCE TO FRONT

Long press [▮+] until the display icon changes. Front is the laser end. Check it every time you switch on.

✕ BACK (DEFAULT) ✓ FRONT – USE THIS

3 MEASURE

With the laser dot on, press [▲]. The reading shows on the bottom line in metres: **1.395 m = 1395 mm**.

⚠ Laser: never point at eyes.

MEASURE. IMPROVE. GO FASTER.